

Step Forms Instructions



Necessary Tools

- Knife


Coverage

Coverage: 40 lineal ft (12.2 m) Exception: Hemi is 28 ft (8.53 m)


Installation

1. The top of the step form should be placed even with the top of the wood form.
2. Before putting the form in place, cut the form at the break point with a sharp knife for the desired height (see diagram)
3. The 1/2 space between the bottom of the wood and the bottom of the form liner allows for float and trowel access.
4. Place the step form on the inside of the wooden form. Secure with nails or tape.
5. Mortex forms can be stripped and finished much earlier than traditional forms. While the concrete is still fresh, you can use a small section of the form to float and trowel the edge.


Exclusive Mortex angled edge makes smaller form footprint and allows float access closer to corner of step.

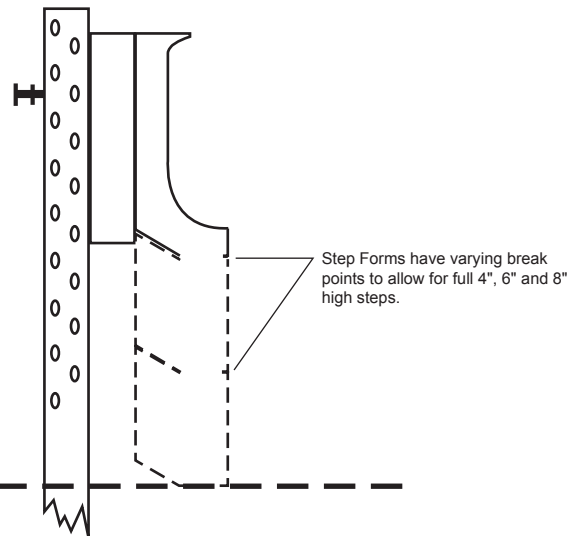


Keystone

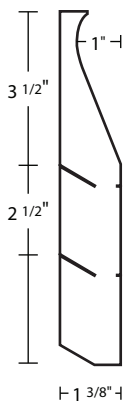


French Curve

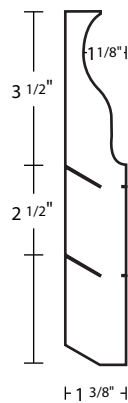


Poly

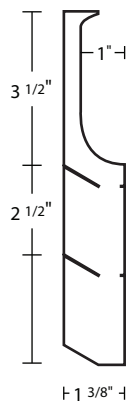

Glow-Rite

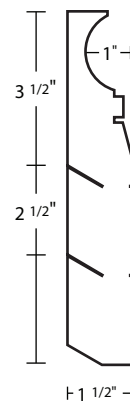

Hemi

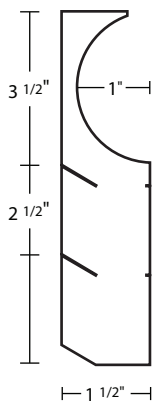

The manufacturer offers this product and Information in good faith, but without guarantee either expressed or implied, as conditions and methods of use of our product are beyond our control.